

1-1/2" - 12" BUTTERFLY VALVE SEAT REPLACEMENT

BFRK-3A-0400

- Step 1: Remove flange bolts, nuts and washers. Remove valve (if dual flange installa tion, place valve in closed position and slide valve from between flange connec tors and gaskets).
- Sten 2: True Lug Valve Only (not shown) — Remove round nuts from lugs on seat-side of valve. Lift seal carrier flange-plate and plate o-ring from valve. Examine all components for damage or debris. Clean and replace as necessary.
- **Step 2A:** The seat can be easily replaced without full valve disassembly. Place valve in full open position. From inside of valve, drive seal carrier out of body taking care not to damage body or disc. NOTE: Seal carrier and seat will be damaged during removal and both are included in seat replacement kit. Examine body seat area for damage or debris. Clean as necessary.
- Sten 3: Reinstall seat and seal carrier: Lay body supported on blocks flat on a solid surface with seal carrier side up, leaving disc in an open position. Install seat centered in body groove. Carefully center seal carrier, rib side up, on body and press seal carrier evenly into body until seal carrier is flush with body. NOTE: This can best be accomplished with an arbor press. However, seal carrier may be gradually tapped into place with a mallet and wood block, working incremen tally around the perimeter of the seal carrier on alternating sides. Valve is now ready for installation.
- **Step 3A:** True Lug Valve Only (not shown) Insert lug bolts through bolt holes from hex receptacle side of body, seating bolt hex-head into receptacles. Position plate o-ring in groove and install seal carrier flange-plate over lugs on face of valve. Install round nuts on lugs and tighten evenly to 12 ft-lbs torque. Valve is now ready for installation.



SPEARS® MANUFACTURING COMPANY • CORPORATE OFFICE

15853 Olden St., Svlmar, CA 91342 • PO Box 9203, Svlmar, CA 91392 (818) 364-1611 • www.spearsmfg.com

PACIFIC SOUTHWEST 15860 Olden St. Sylmar (Los Angeles), CA 91342

(818) 364-1611 • (800) 862-1499 Fax (818) 367-3014

4103 C St. NE Suite 200 Auburn (Seattle), WA 98002 (253) 939-4433 • (800) 347-7327 Fax (253) 939-7557

ROCKY MOUNTAIN 4880 Florence St. Denver, CO 80238 (303) 371-9430 • (800) 777-4154 Fax (303) 375-9546

SOUTH CENTRAL Flower Mound, TX 75028 (469) 528-3000 • (800) 441-1437 Fax (469) 528-3001

5395 West 1520 South Salt Lake City, UT 84104 (303) 371-9430 • (800) 777-4154 Fax (303) 375-9546

NORTHEAST 590 Industrial Dr., Suite 100 Lewisberry (Harrisburg), PA 17339-9532 (717) 938-8844 • (800) 233-0275 Fax (717) 938-6547

4205 Newpoint Pl., Suite 100 Lawrenceville (Atlanta), GA 30043 Bolingbrook (Chicago), IL 60440 (678) 985-1263 • (800) 662-6326 Fax (678) 985-5642

Orlando, Fl. 32837 (407) 843-1960 • (800) 327-6390 Fax (407) 425-3563

1 Gateway Ct., Suite A (630) 759-7529 • (800) 662-6330

Fax (630) 759-7515

INTERNATIONAL SALES Sylmar (Los Angeles), CA 91342 (818) 364-1611 • Fax (818) 898-3774